


How to properly burn DENON's Plug-In Software to a CD-R/RW

If you are experiencing problems with your upload, chances are you did not select the proper settings within your burning software. The below screen shots are of the two most popular brands that will guide you with these important settings.


Valid for: DN-D9000, DN-D4000, DN-S5000, DN-S3000

Roxio – Easy Creator

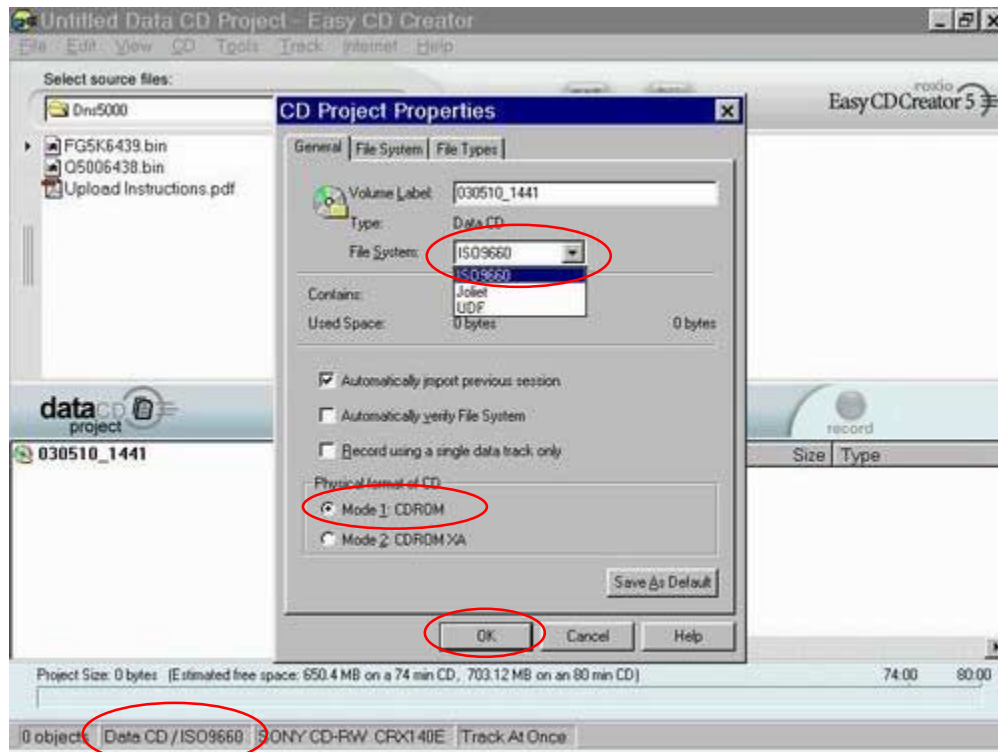

1. Double click on this setting to change your CD properties.
2. Select **“ISO9660”** circled in red
3. Select **“Mode 1”** circled in red
4. Select **“OK”** circled in red
5. Select the two required **“.bin”** files, then finalize at the slowest possible speed of (1X)
6. Read the step-by-step instructions included with the download.

Ahead – Nero

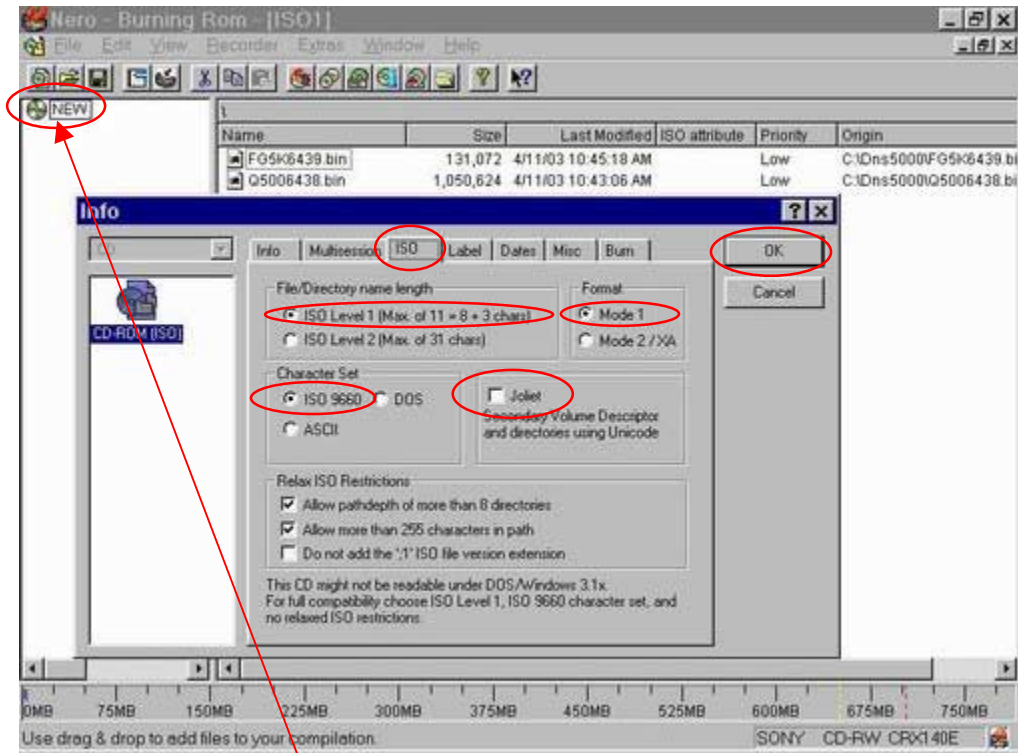

1. Right click on the **“NEW”** icon and select **“Properties”** in the drop down menu to change your CD properties. The Info box will then appear.
2. Select the **“ISO”** tab circled in red
3. Select **“ISO Level 1”** File/Directory name length circled in red
4. Select **“Mode 1”** Format circled in red
5. Select **“ISO 9660”** Character Set circled in red
6. Uncheck the **“Joliet”** box circled in red
7. Select **“OK”** circled in red
8. Select the two required **“.bin”** files, then finalize at the slowest possible speed of (1X)
9. Read the step-by-step instructions included with the download.